ELTONGROUP

PaperWall.

Full installation instructions are included with every roll of PaperWall.

General Guidelines

Installation should be performed by wallpapering professionals. Given the width of PaperWall, a team of two is typically more efficient, however an experienced wallpaper installer can easily hang the product on their own.

Pre-installation Checklist

Before installing, inspect the delivered product carefully to ensure receipt of the correct colour and quantity. Store in a dry place, at a temperature between 15°C – 30°C.

Ensure the lighting in the area where the product will be hung is fully installed and operational. This will help reveal any imperfections in the wall surface prior to installation, and any bubbles during installation.

Temperature and Humidity Requirements

Installation must occur in a climate-controlled environment. An approximate constant temperature of 22°C is required, with a steady relative humidity of 50 – 55%.

Test Hanging

A three drop test hang is recommended, as it enables the specifier to approve surface conditions and adhesion prior to installation being completed. This is a critical first step, as there are no returns on cut goods, and no claims allowed for labour charges or consequential damages.

Installation Tools

Clean Water

Seam & Corner Seam Roller

Plastic Smoother
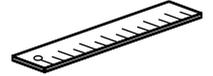
Steel Straight Edge
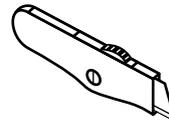
Single-edge Razor Blades

Double Cutting Tool

Table
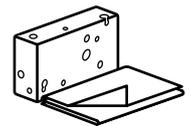
Soft Cloth & Sponge

Clear Strippable Adhesive
Roman Pro 880 or Similar

Primer
Roman Pro 977 or similar

Heavy Duty Lining Paper
Optional

Laser Level
Optional

FSC
www.fsc.org
FSC® C020940
The mark of responsible forestry
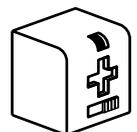
PaperWall.

Installation
2/2

Wall Preparation
Prior to installation, paint the walls with Roman Pro-977 Ultra Prime Primer (or similar) tinted close to the colour of your selected PaperWall product.

- Do not use sealing primer
- Do not install on sealed walls (no eggshell, satin or semi-gloss paints)
- Walls should be smooth and sanded
- If walls are already sealed or have imperfections, consider hanging heavy-duty nonwoven wall liner prior to installing the product. This is at the discretion of your installer.
- Walls must be completely dry before installation can begin.

Trimming
PaperWall must be trimmed or double-cut on the wall with a very sharp, single-edge razor blade.

For best results, overlap and splice joints at a slight angle, using a new blade for each cut. A laser will ensure your installation is square and level.

Pasting
Apply a generous coat of clear strippable adhesive—Roman Pro 880 or equivalent—to the backside of the product, and allow time for it to relax.

While relaxing, the paste soaks into the sheet, which helps avoid bubbling, shrinking and seam opening during hanging. The time required for relaxing is typically five minutes, but to be certain, perform a test on a small strip.

To achieve a superior hold in corners or tight mouldings, consider using contact adhesive.

- Do not fold or crease the product
- Do not get paste on the face of the product
- Do not scrub or rub the face of the product if paste does get on it; instead, gently wipe clean, immediately, with a soft, damp cloth
- Do not use paper towel on the product

Hanging
Use a plastic smoother to gently remove bubbles. Seams may be set with a seam roller, providing the proper precautions are taken. A corner seam roller can be used to ease PaperWall into mouldings, etc. prior to cutting.

Before leaving, inspect each sheet carefully to ensure all bubbles are smoothed out—any that remain will be permanent upon completion of installation.

If necessary, seams can be touched up once dry with a colour-matched pastel to ensure the paper edge is not visible.

Please note that slight colour and/or pattern match variation may occur.